## Description

SB-CMS-PIR Ceiling Mount Infrared Motion Sensor adopting passive infrared detection technology to detect temperature radiating objects or body movement, This sensor has a security function at the same time, it can be used as a normal motion and security detector

#### **Environmental Conditions**

Working Temperature: -5°C ~45°C Operating Relative Humidity: 20%~90% Storage Temperature: -40°C ~+55°C Storage Relative Humidity: 10%~93%

Protection Grade: 2.0

### Features

- . Can detect with motion or without motion, Maximum 99 targets.
- . Use dual-detect technology: Infrared and motion(change)
- . Master-slave mode selectable
- . Security supported

## Performance Parameter

. Input Voltage: DC 12-30 V . Input Current: 15mA/DC 24V

. Installation: Ceiling or Wall mount


. sensitivity setting range :  $20 \sim 80$  . The maximum detection angle :  $110^{\circ}$ 

. Maximum detection range (Radius )

: 4.8m & Height3.4m

. Exterior Size: 80mm×80mm×32mm

### Installation Dimension

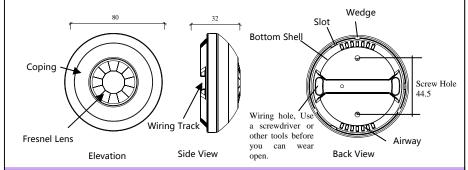


# **Installation Requirement**

- 1, Interior installation and ambient temperature is below 35 degrees Celsius, high temperature environment could lower sensitivity.
- 2, To avoid installed near the air-conditioning vent, temperature changes may cause malfunction.
- To avoid installed near strong electromagnetic interference, strong electromagnetic interference may cause malfunction

Accessories: Each sensor is equipped with a manually range adjustable plastic bracket, to shield part of the sensing area if necessary.

Bus connection: CAT-5 UTP

## System Connections Diagram

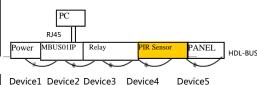


Smart-Bus CAT5 Wire Definition

	Brown, White & Orange, White	СОМ
S	Blue, White & Green, White	DATA-
	Blue & green	DATA+
	Brown & Orange	DC24V


Recommended Connection: Hand in Hand

## Wiring for installation

485 BUS Connector, DC24V、485+、485-、COM

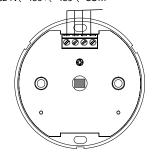

Motion Detecting Range and Recommended Height

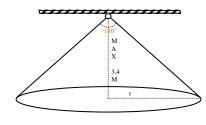

Interior Structure

Detecting Range r: 4.8M

## Packing list

SB-CMS-PIR 1 PC
Installation Manual 1 PC
Fresnel lens bracket

## Safety and Maintenance

Read All Instructions in detail before use

Make sure good Ventilation Environment

Pay Attention to Water-proof, shake-proof and dust-proof when using

Non-Rain, Non-Contact with other liquids or corrosive gases

Should be dried in time if invaded by water or liquid

Contact Professional maintenance staff or HDL company when Product has problem