# Description

SB-DN-1IP Programming Module is the gateway between HDL-Bus system and Ethernet, enable bidirectional data transmission between HDL-Bus and Ethernet.

# **Environmental conditions**

Performance parameters

Working Temperature:  $-5^{\circ}\text{C} \sim 45^{\circ}\text{C}$ Working relative humidity:  $20\% \sim 90\%$ Storage Temperature:  $-40^{\circ}\text{C} \sim +55^{\circ}\text{C}$ Storage relative humidity:  $10\% \sim 93\%$ 

IP Grade: IP2.0

#### Features

- . Bidirectional data exchange between HDL-Bus and Ethernet
- Remote management
- . Intelligent data exchange, minimize data flow
- . Signal interface: RS485, RJ45


# net Power supply: DC12-30V

. Bus consumption: 40mA/DC24V

. Installation: Standard 35mm Din-rail

. Size: 72mm×88mm×66mm

#### Installation Dimension

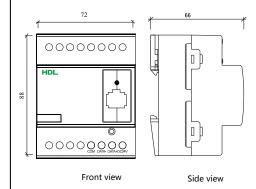

### IP address setting

the default IP address of Bus/IP switch is 192.168.10.250, IP ports is 6000. in case its IP address is not in same network segment with the users' PC server its IP address, need to modify it to make them in the same network segment

#### **Modification Steps:**


- 1, modify the PC server its IP Segment to be 192.168.10.\*\* ( \*\* is arbitrary value ) .
- in menu bar of S-Bus configuration software, click" Devices→ Bus switchboard" double click the switch you want to modify
- click " IP configuration" in the right bar, then appear an modification interface, modify the switchboard IP to be in the same segment with PC server. then click "save" to quit the setting
- 4, recover the PC server to its primary IP

# Installation Requirements

Standard 35mm Din-Rail installation, inside the DB box

Cable used for HDL-BUS: Cat5e
Cable used for RJ45 Ethernet: Cat5e

# System Diagram

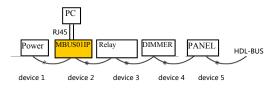


HDL-BUS Definition

Brown white/Orange white	СОМ
Blue white /Green White	DATA-
Blue/Green	DATA+
Brown/ Orange	DC24V

Hand in hand connection is recommended

HDL Smart-Bus Installation Manual for SB-DN-1IP

### Wiring for installation

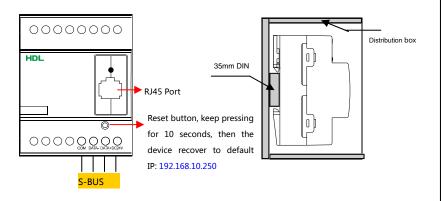

### Package list

SB-DN-1IP	1 PC
Installation Manual	1 PC

# Safety and Maintenance

Read All Instructions in detail before use

Make sure good Ventilation Environment

Pay Attention to Water-proof, shake-proof and dust-proof when using

Non-Rain, Non-Contact with other liquids or corrosive gases

Should be dried in time if invaded by water or liquid

Contact Professional maintenance staff or HDL company when Product has problem